
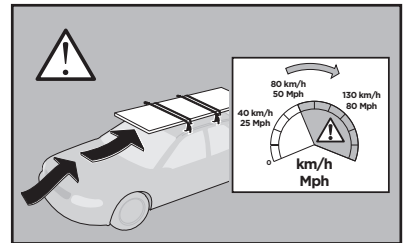
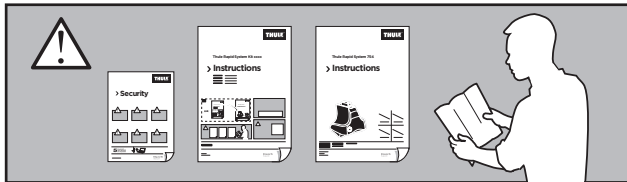
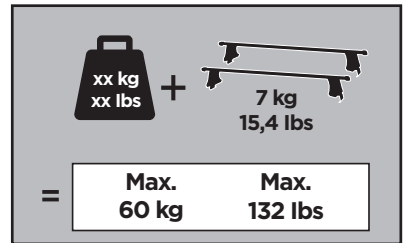


Thule Rapid System Kit 1035

> Instructions

VOLKSWAGEN Passat, 4-dr Sedan, 97-00 / *98-01

*North America

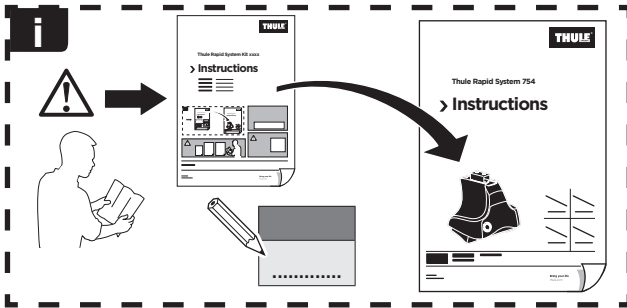


ISO 11154-E

141035
C.20130117
519-1035-02

Bring your life
thule.com



23 x2




100 x2



x1

24 x2






82 x2



x1

1


	X (scale)	X (mm)	X (inch)
VOLKSWAGEN Passat , 4-dr Sedan, 97-00 / *98-01	33	981	38 ⁵/₈

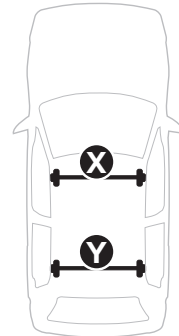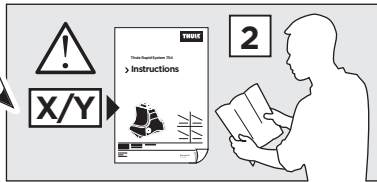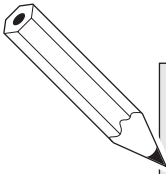


	Y (scale)	Y (mm)	Y (inch)
VOLKSWAGEN Passat , 4-dr Sedan, 97-00 / *98-01	32,5	976	38 ³/₈

2

VOLKSWAGEN **Passat**, 4-dr Sedan, 97-00 / *98-01

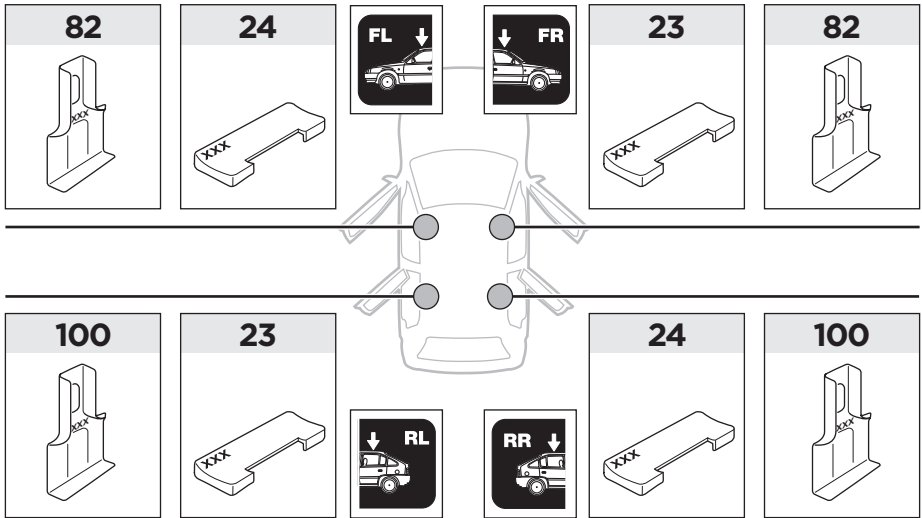

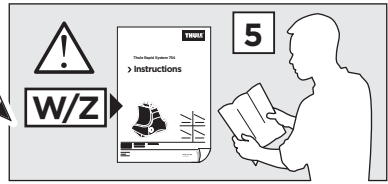3

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLKSWAGEN Passat , 4-dr Sedan, 97-00 / *98-01	280	680	11	26 ³/₄

